

DCS HAND HELD REMOTE

PS2 LOCOMOTIVE SOFT KEYS		
Acronym	Displayed Message	Description
S01	ENGINE SND 1	ENGINE SOUNDS 1
S02	ENGINE SND 2	ENGINE SOUNDS 2
S03	ENGINE SND 3	ENGINE SOUNDS 3
S04	ENGINE SND 4	ENGINE SOUNDS 4
S05	ENGINE SND 5	ENGINE SOUNDS 5
S06	ENGINE SND 6	ENGINE SOUNDS 6
S07	ENGINE SND 7	ENGINE SOUNDS 7
S08	ENGINE SND 8	ENGINE SOUNDS 8
S09	ENGINE SND 9	ENGINE SOUNDS 9
S10	ENGINE SND 10	ENGINE SOUNDS 10
S11	IDLE SOUNDS 1	IDLE SOUND SEQUENCE 1
S12	IDLE SOUNDS 2	IDLE SOUND SEQUENCE 2
S13	IDLE SOUNDS 3	IDLE SOUND SEQUENCE 3
S14	IDLE SOUNDS 4	IDLE SOUND SEQUENCE 4
S15	IDLE SOUNDS 5	IDLE SOUND SEQUENCE 5
S16	IDLE SOUNDS 6	IDLE SOUND SEQUENCE 6
S17	IDLE SOUNDS 7	IDLE SOUND SEQUENCE 7
S18	IDLE SOUNDS 8	IDLE SOUND SEQUENCE 8
SCS	COUPLER SLACK	COUPLER SLACK SOUNDS
SCC	COUPLER CLOSE	COUPLER CLOSE SOUNDS
FCH	CAB CHAT I/O CAB	CHATTER ON/OFF
SSU	EXT START UP	EXTENDED START UP SOUNDS
SSD	EXT SHUT DOWN	EXTENDED SHUT DOWN SOUNDS
STW	TRAIN WRECK	TRAIN WRECK SOUNDS
SFS	FWD SIGNAL	FORWARD SIGNAL SOUND (WHISTLE OR HORN)
SRS	REV SIGNAL	REVERSE SIGNAL SOUND (WHISTLE OR HORN)
LIN	INTERIOR LIGHT ON/OFF	INTERIOR CAB LIGHT ON/OFF
LDI	DITCH LIGHTS OFF/AUTO	LOCOMOTIVE DITCH LIGHTS OFF/AUTO
LTI	INSPECTION LIGHT ON/OFF	TRACK INSPECTION LIGHTS ON/OFF
LMA	MARS LIGHT ON/OFF	LOCOMOTIVE MARS LIGHT ON/OFF

PS2 LOCOMOTIVE SOFT KEYS

Acronym	Displayed Message	Description
LBE	BEACON LIGHT ON/OFF	LOCOMOTIVE BEACON LIGHT ON/OFF
LMK	MARKER LIGHT ON/OFF	LOCOMOTIVE MARKER LIGHTS ON/OFF
LNB	NUMBER BOARD OF/OFF	LOCOMOTIVE NUMBER BOARD LIGHTS ON/OFF
LFB	FIREBOX LIGHT ON/OFF	LOCOMOTIVE FIREBOX GLOW LIGHT ON/OFF
LRL	RUNNING LIGHTS ON/OFF	RUNNING LIGHTS ON/OFF
LA1	AUX LIGHT 1 ON/OFF	AUXILIARY LIGHT 1 ON/OFF
LA2	AUX LIGHT 2 ON/OFF	AUXILIARY LIGHT 2 ON/OFF
LA3	AUX LIGHT 3 ON/OFF	AUXILIARY LIGHT 3 ON/OFF
FCC	CLICK CLACK I/O	CLICKETY CLACK SOUNDS ON/OFF
FCM	CONV MODE	CONVENTIONAL MODE ON/OFF
FDL	DIR LOCK	LOCOMOTIVE DIRECTIONAL LOCK ON/OFF
FSC	SPEED CONTROL	SPEED CONTROL ON/OFF FEATURE
FFR	FEATURE RESET	RESET ALL LOCOMOTIVE FEATURES TO FACTORY
DOD	ODOMETER	DISTANCE TRAVELED TO DATE IN SMPH
DCH	CHRONOMETER	TIME POWERED UP TO DATE IN HRS:MINS:SECONDS
DTO	TRIP ODOMETER	DISTANCE TRAVELED LAST TRIP IN SMPH
DTV	TRACK VOLTAGE	TRACK VOLTAGE = (VALUE)
FRM	MAINTENANCE REQUIRED	MAINTENANCE RESET
FLM	LEGACY MODE	LEGACY MODE ON/OFF
FTS	TRACK SIGNAL	TRACK SIGNAL = (VALUE) TEST; VALUE = 1 TO 10
FMR	MEASURE ROUTE	MEASURE ROUTE MENU COMMANDS
MOP	PANTOGRAPH MENU	OPERATING PANTOGRAPH MENU COMMANDS
FPR	PRESSURE RELEASE	PRESSURE RELEASE SOUND
FBS	BOILER START UP	BOILER START UP SOUND
CDS	COORS DELIVERY STOP	SEQUENCE
CDO	COORS DOOR OPEN	COORS REEFER DOOR OPEN COMMAND & SOUNDS
CDC	COORS DOOR CLOSE	COORS REEFER DOOR CLOSE COMMAND & SOUNDS
INA	NO DISPLAYED MESSAGE	SEND ENGINE TO INACTIVE ROSTER
S/U	NO DISPLAYED MESSAGE	SHORTCUT TO LOCOMOTIVE SETUP MENU - ADDING LOCOMOTIVE TO DCS SYSTEM REMOTE
ALL	NO DISPLAY MESSAGE	ALL ENGINE CONTROL MENU

PS2 LOCOMOTIVE SOFT KEYS		
Acronym	Displayed Message	Description
DCS TRACK CONTROL SOFT KEYS		
TZV	NO DISPLAYED MESSAGE	SET TRACK TO ZERO VOLTS
MIN	NO DISPLAYED MESSAGE	SET TRACK TO MINIMUM VOLTAGE
PS1	NO DISPLAYED MESSAGE	PS1 LOCOMOTIVE START UP
MPG	PS1 PROGRAM MODE	PS1 LOCOMOTIVE PROGRAM MODE
SWITCH LIST SOFT KEYS		
ALL	NO DISPLAYED MESSAGE	ALL SWITCH CONTROL MENU
S/U	NO DISPLAYED MESSAGE	SHORTCUT TO SWITCH SETUP MENU
ACCESSORY SOFT KEYS		
ALL	NO DISPLAYED MESSAGE	ALL ACCESSORY CONTROL MENU
S/U	NO DISPLAYED MESSAGE	ACCESSORY SETUP MENU TO OPERATE FROM REMOTE
ON	ACCESSORY ON	TURN ON ACCESSORY
OFF	ACCESSORY OFF	TURN OFF ACCESSORY
ACT	ACCESSORY ACTIVATE	MOMENTARILY ACTIVATES ACCESSORY